





SPECIFICATIONS	
Model	ECO-001
Max Speed	25 km/h
Range	30 km
Weight	12 kg
Max Load	100 kg
Battery	36V 10Ah
Charging Time	4-6 hours
Motor Power	250W
Brake	Electronic & Mechanical
Light	LED Headlight & Taillight
Display	LED Display
Accessories	Remote Control, Kickstand



ECO-001

1. Safety: Always wear your seat belt and helmet. Do not drink and drive. Do not use the scooter on roads or in traffic.

2. Maintenance: Check the battery level before riding. Keep the scooter clean and dry. Do not use the scooter in rain or snow.

3. Charging: Charge the battery in a well-ventilated area. Do not charge the battery overnight.

4. Storage: Store the scooter in a cool, dry place. Do not store the scooter in a car trunk.

5. Warranty: The scooter is covered by a 1-year warranty. Contact the manufacturer for more information.



CE FCC RoHS REACH

1. The scooter is designed for use on paved surfaces. Do not use the scooter on rough terrain or in off-road conditions.

2. The scooter is not intended for use as a toy. Do not use the scooter for recreational purposes.

3. The scooter is not intended for use by children. Do not allow children to use the scooter.

4. The scooter is not intended for use by people with physical disabilities. Do not use the scooter if you are unable to operate it safely.

5. The scooter is not intended for use in public places. Do not use the scooter in parks, schools, or other public areas.



HAPPY LIFE

1. The scooter is designed for use on paved surfaces. Do not use the scooter on rough terrain or in off-road conditions.

2. The scooter is not intended for use as a toy. Do not use the scooter for recreational purposes.

3. The scooter is not intended for use by children. Do not allow children to use the scooter.

4. The scooter is not intended for use by people with physical disabilities. Do not use the scooter if you are unable to operate it safely.

5. The scooter is not intended for use in public places. Do not use the scooter in parks, schools, or other public areas.